



MODBUS OPTION USER GUIDE

Chiller Control

Document number ECG-UG-19-004

This document is the property of Manufacturer and is delivered on the express condition that it is not to be disclosed, reproduced in whole or in part, or used for manufacture by anyone other than Manufacturer without its written consent, and that no right is granted to disclose or so use any information contained in said document.

Manufacturer reserves the right to change any product specifications without notice.

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	2 OF 23

IMPORTANT INFORMATION

PURPOSE

This document aims to provide an overview on the MODBUS option implemented on chiller controller.

Document Name	Document ID	Publication Date
MODBUS User Guide	ECG-UG-19-004	July 2019

REFERENCES

The following list includes all documents that may be the source of reference for material discussed in this publication.

- IOM Control
- IOM Machine
- Service Guide

CONVENTIONS

The following symbols are used to highlight important information in this document.



CAUTION

This symbol is used to indicate potentially hazardous situations and conditions.



IMPORTANT

This symbol is used to present information relevant to the topic.



INFORMATION

This symbol is used to provide some useful information.

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	3 OF 23

REVISIONS HISTORY

REV	DATE (yyyy-mm-dd)	DESCRIPTION	DONE BY
Original	2019-07-02	<ul style="list-style-type: none">Original	ER
A	2020-03-12	<ul style="list-style-type: none">Remove mapping to make the document generic to all chillers	ER
B	2020-07-08	<ul style="list-style-type: none">Modbus configuration updated (real_typ, reg32bit descriptions added)	BF
C	2022-01-12	<ul style="list-style-type: none">Recommendation for the refresh time period for Modbus communication added	MG
D	2022-02-17	<ul style="list-style-type: none">Modbus RTU parity settings updated (section 4.1.2)	MG
E	2022-12-01	<ul style="list-style-type: none">Modbus RTU stop bit settings updated (section 4.1.2)	YN
F	2023-03-24	<ul style="list-style-type: none">Modbus RTU stop bit settings updated (section 4.1)	YN
G	2023-04-27	<ul style="list-style-type: none">Mapping interface description updated (section 7)	ER/MG
H	2023-07-13	<ul style="list-style-type: none">Mapping interface description updated (section 7)IP address setting added (section 3)	MG
I	2024-03-01	<ul style="list-style-type: none">Added Network Configuration section (section 3.3.3)Added Appendix	MG

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	4 OF 23

ABBREVIATIONS

Abbreviation	Description
CIDR	Classless Inter-Domain Routing
DI	Discrete Input
EXV	Expansion Valve
FC	Free Cooling
HR	Holding Register
IEEE	Institute of Electrical and Electronics Engineers
IP	Internet Protocol
IR	Input Register
Net	Network
OAT	Outside Air Temperature
RTU	Remote Terminal Unit
SCT	Saturated Condensing Temperature
SST	Saturated Suction Temperature
TCP	Transmission Control Protocol
xxLS	..Low Speed
xxHS	..High Speed

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	5 OF 23

CONTENTS

- 1 INTRODUCTION6**
 - 1.1 Purpose6
 - 1.2 Modbus6
- 2 HOW TO TRANSFORM A NON-MODBUS CHILLER TO A MODBUS CHILLER7**
 - 2.1 Prerequisites7
 - 2.2 Software activation key7
 - 2.3 List of available software options8
- 3 IP ADDRESS SETTING9**
 - 3.1 IP address SmartVu controller9
 - 3.2 IP address modification10
 - 3.3 Network configuration: Overview of parameters11
 - 3.3.1 General information11
 - 3.3.2 Procedure for configuring the NETWORK table12
 - 3.3.3 Network setting: Possible scenario13
- 4 MODBUS FOR CHILLER14**
 - 4.1 Modbus RTU14
 - 4.1.1 Modbus Settings14
 - 4.1.2 MODBUSRS16
 - 4.2 Modbus TCP/IP17
 - 4.2.1 Modbus Settings17
 - 4.2.2 MODBUSIP18
- 5 CONNECTION CHANNELS19**
 - 5.1 RS485 socket details (Modbus RTU)19
 - 5.2 RJ45 socket details (Modbus TCP)20
- 6 MODBUS FUNCTIONS21**
- 7 MAPPING INTERFACE22**
- APPENDIX23**

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	6 OF 23

1 INTRODUCTION

1.1 Purpose

This guide describes the Modbus option for chillers. It is intended for Building Management System (BMS) engineers. All information already provided in the product IOM are not available in this document.

1.2 Modbus

Modbus is a *data communication protocol for building automation and control networks*. It is based on a client-server model or master/slave model (Modbus RTU).

NOTE: Modbus RTU Master is the client (the device that sends requests to other Modbus devices).

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	7 OF 23

2 HOW TO TRANSFORM A NON-MODBUS CHILLER TO A MODBUS CHILLER

2.1 Prerequisites


Modbus (option 149B) may be an option which requires a Software Activation Key to be activated. This software-protected option can be factory-installed or installed on-site by a service technician. See section 2.3 to know if a software option key is required.

2.2 Software activation key

The Software Activation Key is an individual license key based on machine MAC address.

To obtain the Software Activation Key

1. Please contact your local Service representative.
2. Please beware that the controller **eth0/J15** MAC address will be requested in order to provide the correct Software Activation Key.
 - o A **sticker** is present on the back of the controller panel (top right location) with J15 MAC. The address is coded using 12 digits: XX-XX-XX-XX-XX-XX
 - o You may check the MAC address via the controller **user interface**. Go to the Configuration menu and select the *Add Options* menu (ADD_OPT). The MAC address will be displayed.

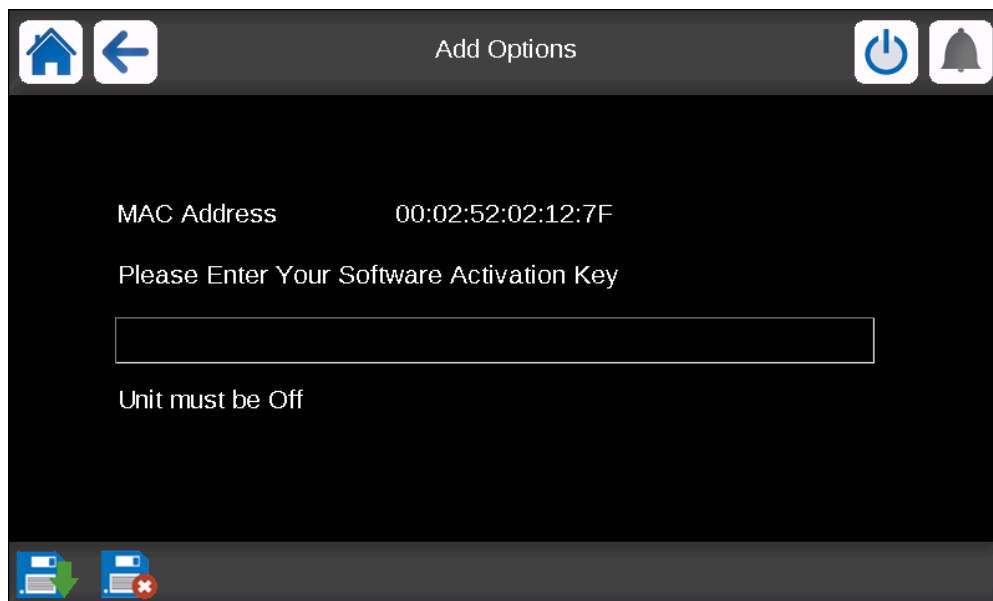


ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	8 OF 23

2.3 List of available software options

The list of currently available software options can be verified via the controller user interface.

To verify available software options

1. Go to the Main menu.
2. Select the *Software Options* menu (OPT_STA).
 - The menu can be accessed when logged in (at least user-access level required).
3. If the status of the specific option is set to “Yes”, it means that the Software Activation Key for this option is already installed.
4. Verify the status of the “OPT149B: Modbus” parameter.
 - If the status of Modbus option is set to “No”, please go to section 2.2 Software activation key

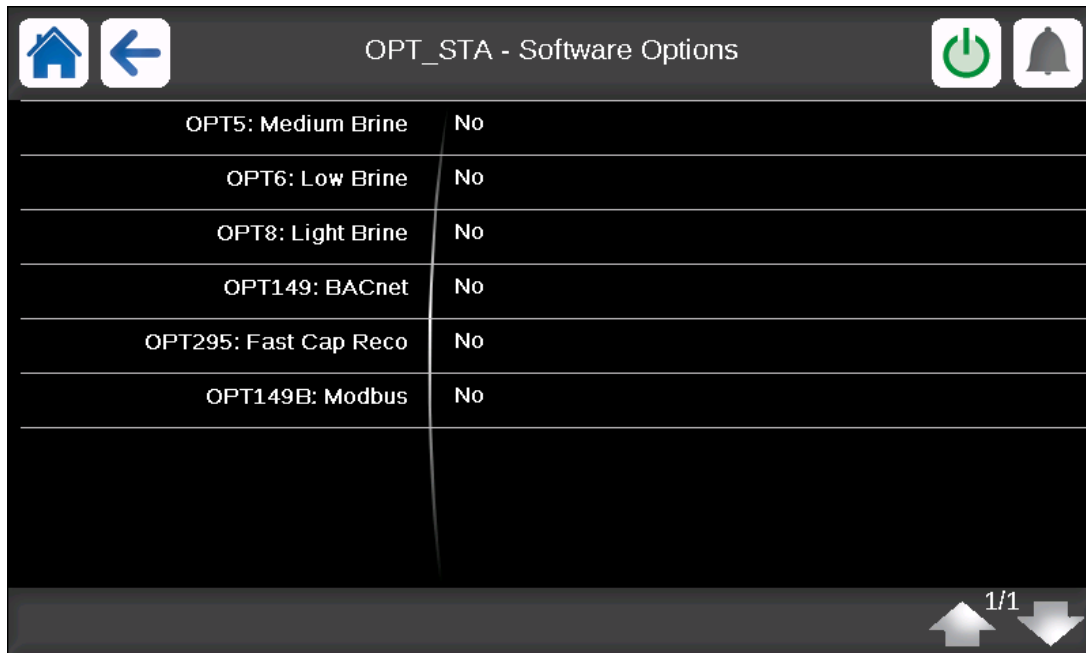

OPT_STA - Software Options	
OPT5: Medium Brine	No
OPT6: Low Brine	No
OPT8: Light Brine	No
OPT149: BACnet	No
OPT295: Fast Cap Reco	No
OPT149B: Modbus	No



The Software Options menu is read-only. Once the Software Activation Key is installed, the status of the option that was installed will change to “yes”.

The number of options that are available may differ depending on the chiller type.



In case the controller is replaced, the Software Activation Key must be installed again. Please contact your local Service representative for more information.


ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	9 OF 23


3 IP ADDRESS SETTING

3.1 IP address SmartVu controller

The IP address information can be accessed via the System menu available on the SmartVu user interface.

To go to IP address settings

1. Go to the home screen on the SmartVu user interface.
2. Press the **System** menu button  in the upper-right corner of the screen.
3. Select the *Network* menu (NETWORK).

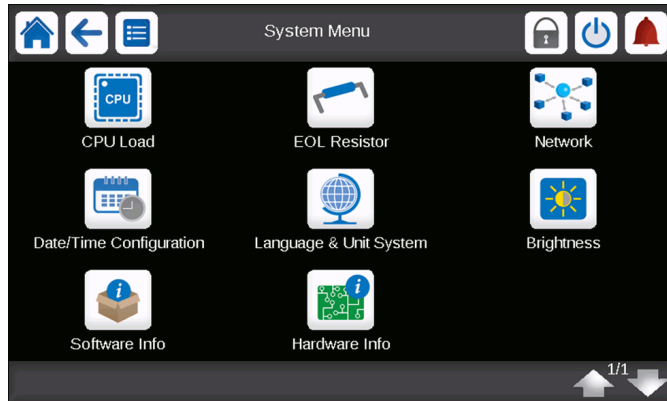

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	10 OF 23

3.2 IP address modification

If necessary, you may change unit IP address on the SmartVu user interface or via the web browser (the web browser interface looks similar to the touch screen).

To modify unit IP address

- Go to the *Network* menu (NETWORK).
 - The first page displays eth0 (J15) settings.
 - The second page displays eth1 (J16) settings.
- Change the IP address and mask as necessary.

IMPORTANT: The Gateway Mask may be displayed differently depending on the software version. As of 2023, the Gateway Mask is in the CIDR format.

Network screen – version 1

The screenshot shows the 'Network' screen for IP Network Interface J15 (eth0). The settings are as follows:

Field	Value
MAC Address	A0:F6:FD:28:4C:D1
TCP/IP Address	169.254.1.1
Subnet Mask	255.255.255.0
Default Gateway	169.254.1.3
Gateway Mask	255.255.0.0
Domain Name Server (DNS)	169.254.1.3
	169.254.1.4

A red box highlights the 'Gateway Mask' field, which contains the value 255.255.0.0. At the bottom, a status bar indicates 'IP address applied successfully'.

Network screen – version 2 (Gateway Mask in CIDR notation)



The screenshot shows the 'Network' screen for IP Network Interface J5 (eth0). The settings are as follows:

Field	Value
MAC Address	34:6D:9C:00:01:1F
TCP/IP Address	169.254.1.1
Subnet Mask	255.255.255.0
Default Gateway	169.254.1.3
Gateway Mask	169.254.0.0/16
Domain Name Server (DNS)	169.254.1.3
	169.254.1.4

A red box highlights the 'Gateway Mask' field, which contains the value 169.254.0.0/16 in CIDR notation.

Example: Gateway 169.254.1.3

Gateway mask	Gateway mask in CIDR notation
255.255.0.0	169.254.0.0/16
255.0.0.0	169.0.0.0/8
0.0.0.0	0.0.0.0/0

- Press the Save button  to confirm or the Cancel button  to cancel changes.

NOTE: To learn more about CIDR notation and see the list of subnet masks, please go to **APPENDIX** on page 23.

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	11 OF 23

3.3 Network configuration: Overview of parameters

3.3.1 General information

NETWORK / MODBUS / BACNET table settings must be made only by qualified personnel with in-depth knowledge of network configurations. Modifying the parameters of these tables without technical expertise may lead to network communication malfunctions.

IP address defines the address of the SmartVu on the IP network.

The subnet mask defines the subnet in which the equipment is located. By default, it is equal to 255.255.255.0 which allows any device with an IP address on the same subnetwork to communicate with our equipment without the need for a gateway.

Example:

If the IP address of the SmartVu is 172.30.100.100 with a subnet mask equal to **255.255.255.0**, then it will be visible to any device with an IP address on the same subnet, i.e. beginning with **172.30.100**.

The subnet mask of this device is also 255.255.255.0.
The maximum number of devices on this subnet is 255.

If the IP address of the SmartVu is 172.30.100.100 with a subnet mask equal to **255.255.0.0**, then it will be visible to any device with an IP address on the same subnet, i.e. beginning with **172.30**.

The subnet mask of this device is also 255.255.0.0.
The maximum number of devices on this subnet is 65 535.

If required by the customer network, the Gateway can be configured so that the SmartVu can be accessed by equipment that does not have its IP address on the same subnet.

The IP address of the Gateway located on the SmartVu subnet will be configured in the Network menu of the SmartVu interface. The Gateway's subnet mask defines the scope of IP addresses that can be reached.

In the example above, Gateway IP address is **172.30.100.1** (same subnet as SmartVu):

- If the gateway mask configuration is **172.30.0.0/16** (CIDR format¹ or formerly 255.255.0.0), then the equipment to be reached (e.g. a BMS) will have an IP address starting with 172.30.
- If the gateway mask configuration is **172.0.0.0/8** (CIDR format¹ or formerly 255.0.0.0) then the device to be reached (e.g. a BMS) will have an IP address starting with 172.
- If the gateway mask configuration is **0.0.0.0/0** (CIDR format¹ or formerly 0.0.0.0), then the device to be reached (e.g. a cloud) can have any IP address.

IMPORTANT: Parameters on the Network screen of the SmartVu interface must be communicated by the customer's IT department prior to commissioning.

¹ **CIDR format:**

Class address has been superseded by Classless Inter-Domain routing (to extend the number of possible addresses). CIDR is based on Subnet mask principle. The subnet mask tells the router which part of the IP address is assigned to the hosts (different network participants) and which determines the network.

The CIDR format adds a prefix description immediately after the rightmost byte to define the network part of the IPv4 address. An IPv4 address with CIDR notation has a length of 32 bits and the same dotted decimal format.

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	12 OF 23

3.3.2 Procedure for configuring the NETWORK table

IP Network Interface J5 (eth0):	
MAC Address	34:6D:9C:00:01:1F
① TCP/IP Address	169.254.1.1
② Subnet Mask	255.255.255.0
③ Default Gateway	169.254.1.3
④ Gateway Mask	169.254.0.0/16 CIDR 255.255.0.0
Domain Name Server (DNS):	169.254.1.3
	169.254.1.4

(No CIDR in older software versions)

To configure Network settings, go to the System menu > Network

- Set the SmartVu IP address (see B in the “Network” view above).
- Set the subnet mask (see C in the “Network” view above).
If necessary, do the following:
- Set the Gateway IP address (see D in the “Network” view above).
 - Gateway IP address must be part of the subnet defined in step 1 and step 2 above.
- Configure the Gateway mask (see E in the “Network” view above).
 - Gateway Mask must be set according to IP addresses to be reached (NOT part of the subnetwork configured in step 1 and step 2 above).

Note:

- The Gateway mask cannot have a more restrictive value than the subnet mask.
- The Gateway IP address must be within the SmartVu subnet and the Gateway mask.
- SmartVu 7": If 2 Ethernet ports (J15/J16) are used, different IP addresses must be defined on different subnets (no overlapping subnets and gateway masks).

Example No. 1 – INCORRECT

(Addresses are NOT compatible: Overlapping subnet masks)

- J15: IP address 169.254.1.1 & Subnet mask 255.255.255.0
- J16: IP address 169.254.1.2 & Subnet mask 255.255.255.0

Example No. 2 - CORRECT

- J15: IP address 169.254.1.1 & Subnet mask 255.255.255.0
 - Gateway 169.254.1.2 & mask 169.254.0.0/16
- J16: IP address 192.168.2.1 & Subnet mask 255.255.255.0
 - Gateway 192.168.2.2 & mask 192.0.0.0/8
- Information concerning the client IP network (addresses/Gateway) must be supplied by the client (site IT department) and is essential for the correct configuration of this NETWORK table.

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	13 OF 23

3.3.3 Network setting: Possible scenario

SmartVu is configured at address 184.162.1.2 requested by the customer.

The customer has their equipment at these addresses:

EQU1 = 184.162.1.10

EQU2 = 184.162.6.1

EQU3 = 184.162.30.5

The customer also wants to access their PC whose address is 184.170.25.8.

The subnet mask is set to, for example, 255.255.0.0 (which allows access to 65 535 addresses starting with 184.162).


As this address is not part of the subnet defined above, we need to use the Gateway and configure the Gateway mask to "open" the subnet to reach the PC.

The Gateway's IP address must be configured according to the customer's instructions, and must be within the subnetwork defined above. Let's take 184.162.2.1 as an example.

For the SmartVu located at address 184.162.1.2 to communicate with the PC located at address 184.170.25.8, you need to set the Gateway mask on the SmartVu to 184.0.0.0/8 (equivalent to 255.0.0.0 in non-CIDR notation).

Note: The network architecture described in this example has been chosen to make it easy to understand the various parameters (subnet mask and gateway mask). Depending on how the customer/local IT department wishes to architect its network, it is entirely possible to configure subnet and gateway masks differently to enable communication between all equipment.

The example is summarized in the diagram below.

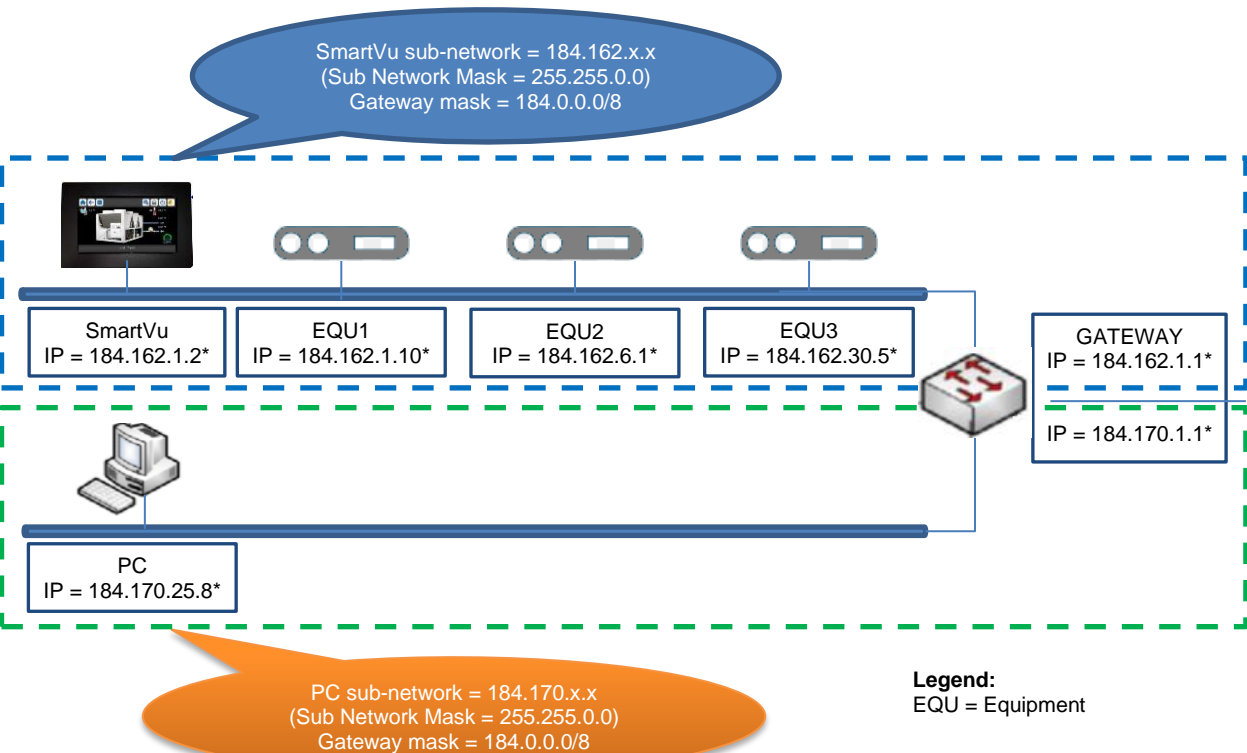

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	14 OF 23

4 MODBUS FOR CHILLER

The Modbus communication option can be set for Modbus RTU or for Modbus TCP/IP.

To modify Modbus parameters:

- The user must be logged in with a user access level.
- Modbus option must be activated.

4.1 Modbus RTU

Refresh time period for Modbus communication

When setting Modbus communication, it is highly recommended to set the refresh time period to **1 second** or **5 seconds** per point.

The Modbus communication refresh rate should NOT be too high. For example, if you set the Modbus communication with the refresh time period of 200 ms per point, this is likely to overload the controller and cause some errors.

Note: This refresh time period is defined in the customer Modbus RTU Master device.

4.1.1 **Modbus Settings**

In order to enable/disable the Modbus RTU option:

- Go to the Main menu.
- Navigate to the Configuration menu, and then the Network menu.
- Select the MODBUSRS menu for Modbus over RS485
- Set the "RTU Server Enable" parameter to "Yes".

Available Modbus parameters:

Table Name: MODBUSRS	PIC Table Type: 13H	Instance: depends on equipment	//MAINMENU/CONFIG/ Network		
Point Name	Displayed text*	Status	Default	Unit	
1 modrt_en	RTU Server Enable	No / Yes	No	-	
2 ser_UID	Server UID	1 to 247	1	-	
3 metric	Metric Unit	No / Yes	Yes	-	
4 swap_b	Swap Bytes	0 to 1	0	-	
5	0 = Big Endian			-	
6	1 = Little Endian			-	
7 baudrate	Baudrate	0 to 2	0	-	
8	0 = 9600			-	
9	1 = 19200			-	
10	2 = 38400			-	
11 parity	Parity	0 to 4	0	-	
12	0 = No Parity			-	
13	1 = Odd Parity			-	
14	2 = Even Parity			-	
15 stop_bit	Stop bit	0 to 1	1	-	
16	0 = One Stop Bit			-	
17	1 = two Stop Bits			-	
18 real_typ**	Real type management	0 to 1	1	-	
19	0 = Float X10			-	
20	1 = IEEE 754			-	
21 reg32bit**	Enable 32 bits registers	0 to 1	1	-	
22	0 = IR/HR in 16 bit mode			-	
23	1 = IR/HR in 32 bit mode			-	

* Displayed text may differ depending on the language selected.

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	15 OF 23

** Please note that some configurations are forbidden and they will not work. The following configurations are allowed:

real_typ	reg32bit	Config result
0	0	Float x10 : 16bits
0	1	Float x10 : 32bits
1	1	IEEE 754 : 32bits

In the Excel file containing the list of Modbus points, the “Display mode” column depends on the configuration given above.

- Float X10 correspond to the decimal value multiplied by 10 and displayed using an integer format.
- IEEE 754 correspond to the decimal value displayed using a float format.



Please note that changing parameters in the Modbus table will require/cause a software reboot.



Use a Modbus device discovery tool, e.g. ModbusDoctor, to verify communication with Modbus devices – Chiller must be discovered.

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	16 OF 23

4.1.2 MODBUSRS

MODBUSRS	
RTU Server Enable	<p>After a power up, "RTU Server Enable" parameter MUST BE enabled (default configuration is Disable) to start the Modbus RTU driver. This parameter is available in the Configuration menu, inside Modbus RTU Config menu.</p> <p>If the conditions are met, then the Modbus stack is built and chiller objects are created from the existing configuration file variables_modbus.txt</p> <p>An easy way to verify that the chiller became a Modbus device is to use a free and easy to use software like "ModbusDoctor".</p>
Server UID	<p>The Modbus server UID value can be modified from 1 to 247.</p> <p>The default value is equal to 1.</p>
Metric Unit	<p>Metric units and Imperial units are supported.</p> <p>By default, Modbus data will be in metric units. Default value = YES</p>
Swap Bytes	<p>The Swap Bytes value can be set to 0 for Big Endian or 1 for Little Endian.</p> <p>The default value is equal to 0 for Big Endian.</p>
Baudrate	<p>The Modbus Baudrate can be set to:</p> <ul style="list-style-type: none"> • 0 for 9600 bauds, • 1 for 19200 bauds or • 2 for 38400 bauds. <p>The default value is 0 for 9600 bauds.</p>
Parity	<p>The Modbus parity can be set to:</p> <ul style="list-style-type: none"> • 0 for No parity • 1 for Odd parity • 2 for Even parity <p>When no parity is selected, it is recommended to select two stop bits (see also "stop bit" description below). For example, no parity and one stop bit is NOT recommended.</p> <p>The default value is 0 for No parity.</p>
Stop bit	<p>One (set 0) or Two (set 1) stop bits can be selected.</p> <p>0 = One Stop Bit 1 = Two Stop Bits</p>
Real type management	<p>Due to no native floating point representation for the Modbus communication protocol, IEEE754 representation has been integrated. As the opposite, float handled as integer is also available (i.e. float x 10) depending on setup.</p> <p>The Real Type Management can be set to:</p> <ul style="list-style-type: none"> • 0 for Float X10 configuration or • 1 for IEEE 754 configuration. <p>The default value is 1 for IEEE 754 configuration.</p>
Enable 32 bits registers	<p>Inputs Registers and Holding Registers can be set over 16 bits or over 32 bits.</p> <p>Set Enable 32 bits registers to:</p> <ul style="list-style-type: none"> • 0 for 16 bits mode • 1 for 32 bits mode <p>The default value is 1 for 32 bits mode.</p>



The Chiller Controller MUST BE in "Network" mode to be controlled from Modbus. Occupancy status from Modbus is ignored in "Local" mode.

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	17 OF 23

4.2 Modbus TCP/IP

4.2.1 Modbus Settings

In order to enable/disable the Modbus TCP/IP option:

- Go to the Main menu.
- Navigate to the Configuration menu.
- Select MODBUSIP menu.
- For Modbus over TCP/IP, set the "TCP/IP Server Enable" parameter to "Yes".

Available Modbus TCP/IP parameters:

Table Name: MODBUSIP		PIC Table Type: 13H	Instance: depends on equipment	//MAINMENU/CONFIG/ Network	
	Point Name	Displayed text*	Status	Default	Unit
1	modip_en	TCP/IP Server Enable	No / Yes	No	-
2	ser_UID	Server UID	1 to 247	1	-
3	port_nbr	Port Number	0 to 65535	Yes	-
4	metric	Metric Unit	No / Yes	0	-
5	swap_b	Swap Bytes	0 to 1		-
6		0 = Big Endian			-
7		1 = Little Endian		1	-
8	real_typ**	Real type management	0 to 1		-
9		0 = Float X10			-
10		1 = IEEE 754			-
11	reg32bit**	Enable 32 bits registers	0 to 1	1	-
12		0 = IR/HR in 16 bit mode			-
13		1 = IR/HR in 32 bit mode			-
14	conifnam	IP port interface name	0 to 1	0	-
			0=J5/J15		-
			1=J16		-
15	timeout	Com. timeout (s)	60 to 600	120	sec
16	idle	Keepalive idle delay(s)	0 to 30	10	sec
17	intrvl	Keepalive interval(s)	0 to 2	1	sec
18	probes	Keepalive probes nb	0 to 10	10	-

* Displayed text may differ depending on the language selected.

** Please note that some configurations are forbidden and they will not work. The following configurations are allowed:

real_typ	reg32bit	Config result
0	0	Float x10 : 16bits
0	1	Float x10 : 32bits
1	1	IEEE 754 : 32bits

In the Excel file containing the list of Modbus points, the "Display mode" column depends on the configuration given above.

- Float X10 correspond to the decimal value multiplied by 10 and displayed using an integer format
- IEEE 754 correspond to the decimal value displayed using a float format



Please note that changing parameters in the Modbus table will require/cause a software reboot.



Use a Modbus device discovery tool, e.g. ModbusDoctor, to verify communication with Modbus devices – Chiller must be discovered.



Updating controller configuration, including Network IP address, mask address, gateway address parameters MUST be followed by a user power cycle – in order to make these changes effective in Modbus stack.

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	18 OF 23

4.2.2 MODBUSIP

MODBUSIP	
TCP/IP Server Enable	<p>After a power up, "TCP/IP Server Enable" parameter MUST BE enabled (default configuration is Disable) to start the Modbus IP driver. This parameter is available in the Configuration menu, inside Modbus IP Config menu.</p> <p>If the conditions are met, then the Modbus stack is built and chiller objects are created from the existing configuration file variables_modbus.txt</p> <p>An easy way to verify that the chiller became a Modbus device is to use a free and easy to use software like "ModbusDoctor".</p>
Server UID	The Modbus server UID value can be modified from 1 to 247. The default value is equal to 1.
Port Number	The Transfer Control Protocol port number for Modbus can be modified from 0 to 65535. The default value is equal to 502.
Metric Unit	Metric units and Imperial units are supported. By default, Modbus data will be in metric units. Default value = YES
Swap Bytes	The Swap Bytes value can be set to 0 for Big Endian or 1 for Little Endian. The default value is equal to 0 for Big Endian.
Real type management	<p>Due to no native floating point representation for the Modbus communication protocol, IEEE754 representation has been integrated. As the opposite, float handled as integer is also available (i.e. float x 10) depending on setup.</p> <p><u>The Real Type Management can be set to:</u></p> <ul style="list-style-type: none"> 0 for Float X10 configuration or 1 for IEEE 754 configuration. <p>The default value is 1 for IEEE 754 configuration.</p>
Enable 32 bits registers	<p>Inputs Registers and Holding Registers can be set over 16 bits or over 32 bits.</p> <p><u>Set Enable 32 bits registers to:</u></p> <ul style="list-style-type: none"> 0 for 16 bits mode 1 for 32 bits mode <p>The default value is 1 for 32 bits mode.</p>
IP port interface name	<p>IP port can be selected:</p> <p><u>For 7-inch display</u>, two interfaces are available, default value is 1 (J16). For J15, it shall be set to 0.</p> <p><u>For 4.3-inch display</u>, only one interface is available, default value is 0 (J5).</p>
Com. timeout (s)	<p>This is the number of seconds to wait to disconnect the TCP Connection when there is no response from the client. It can be configured between 60 and 600 seconds.</p> <p>If the user didn't select the time within in the range, default value of 120 seconds will be enabled to disconnect the TCP connection in case of no communication from the client.</p>
Keepalive idle delay(s)	<p>The number of seconds to keep idle the Modbus connection before to start sending keep alive packets can be configured using the idle value set between 0 and 30 seconds.</p> <p>If the user wants to disable this feature, the points should be set to zero.</p>
Keepalive interval(s)	<p>This value defined the intermediate seconds between each keep alive packet. It can be configured between 0 and 2 seconds.</p> <p>If the user wants to disable this feature, the points should be set to zero.</p>
Keepalive probes nb	<p>This is the number of counts to check before disconnecting the connection if there are no acknowledged packets from the client. Value can bet set between 0 and 10.</p> <p>If the user wants to disable this feature, the points should be set to zero.</p>




The Chiller Controller MUST BE in "Network" mode to be controlled from Modbus.
Occupancy status from Modbus is ignored in "Local" mode.
Modbus RS and Modbus TCP/IP cannot run at the same time.


ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	19 OF 23

5 CONNECTION CHANNELS

Diagrams below show sockets available for communication purposes with external devices.

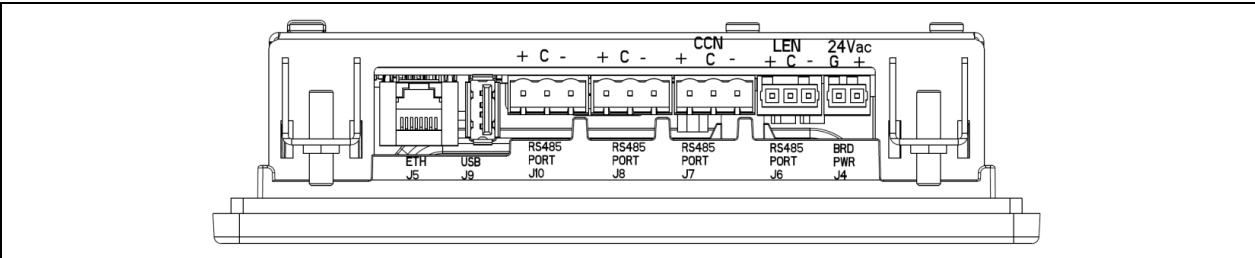

Sockets available for communication on a 4.3-inch interface

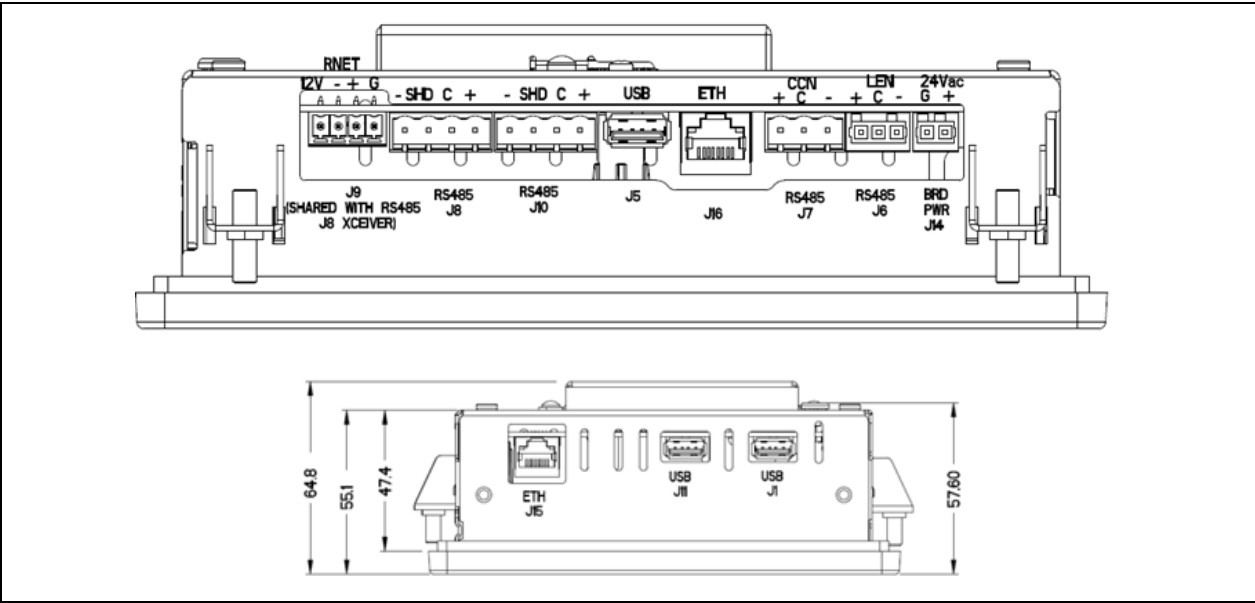

Sockets available for communication on a 7-inch interface

5.1 RS485 socket details (Modbus RTU)

Port J10 is intended for Modbus RTU with RS485 (i.e. no control flow).

Transmission mode:

Used for Local area network communication type by external devices.

- With twisted shielded pair.
- Distance up to 1000 m without amplifier.
- Normally configurable at 9600, 19200 or 38400 baud in half duplex.
- Parity bit may be active or deactivated. If parity is disabled, additional stop bits are automatically set for frame timing considerations. Otherwise, parity may be odd or even according to the settings chosen.

Exclusively RTU mode operates with configurable combination (No ASCII mode permission)

- 1 start, 8 data, even parity, 1 stop bit
- 1 start, 8 data, odd parity, 1 stop bit
- 1 start, 8 data, no parity, 2 stop bits
- 1 start, 8 data, no parity, 1 stop bit (NOT recommended)

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	20 OF 23

- RTU protocol is compatible with both Little/ Big Endian for data field (i.e. either most significant byte is sent first or least significant byte is sent first).
- Unit identifier must be declared from 1 to 247 as slave product number setup (i.e. station number)
- Cyclic Redundancy Check is made by the RTU protocol layer as defined in Appendix A of “Modbus over serial line” specification available at modbus.org
- Due to floating no native floating point representation for the Modbus communication protocol, IEEE754 representation has been integrated. As the opposite, float handled as integer is also available (i.e. float X 10) depending on setup.

5.2 RJ45 socket details (Modbus TCP)

RJ45 Ethernet port J5 (4.3” display) or RJ45 Ethernet port J15/J16 (7” display) is/are intended for Modbus IP.

- For a 7-inch display, the default port value is 1 (J16).
- For a 4.3-inch display, the port value is 0 (J5)

Used for wide area network communication type by external devices (building management system tool or maintenance tool and so on...).

- Cross pair wired cable shall be used for nominal configuration.
- Distance up to 100m without amplifier.
- Speed communication at 10 Mega baud not configurable.
- IPv4 address configurable for class address with DHCP NOT active for
Class A (0.xxx.xxx.xxx to 127.xxx.xxx.xxx)
Class B (128.0.xxx.xxx to 191. 255.xxx.xxx)
Class C (192.0.0.xxx to 223.255.255.xxx)
(IP address declared on the control unit needed to set up connection with external device)
- All requests are sent via Transfer Control Protocol on registered port 502 by default but other port numbers may be set as calibrate value.
- TCP/IP Modbus protocol is compatible with both Little/Big Endian for data field (i.e. either most significant byte is sent first or least significant byte is sent first).
- Unit identifier must be declared from 1 to 247 as slave product number setup (i.e. station number).

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	21 OF 23

6 MODBUS FUNCTIONS

The following standard functions are supported:

Code	Modbus function	Address register range	Application
01 with quantity 1	READ COIL STATUS	0 to 9999 (decimal)	None
01 with quantity N	READ MULTIPLE COIL STATUS (from 1 to 2000max. contiguous)		None
15 with quantity 1	WRITE COIL		None
15 with quantity N	WRITE MULTIPLE COILS (from 1 to 2000max. contiguous)		None
02 with quantity 1	READ DISCRETE INPUT	0 to 9999 (decimal)	Alarms
02 with quantity N	READ MULTIPLE DISCRETE INPUTS (from 1 to 2000max. contiguous)		
04 with quantity 2	READ INPUT REGISTER	0 to 9999 (decimal)	Useful user parameters
04 with quantity NX2	READ MULTIPLE INPUT REGISTERS (from 1 to 123 max. contiguous)		Useful user parameters
03 with quantity 2	READ HOLDING REGISTER	0 to 9999 (decimal)	Configuration or service dataset
03 with quantity NX2	READ MULTIPLE HOLDING REGISTERS (from 1 to 123 max. contiguous)		Configuration or service dataset
16 with quantity 2	WRITE HOLDING REGISTER		Configuration or service dataset
16 with quantity NX2	WRITE MULTIPLE HOLDING REGISTERS (from 1 to 123 max. contiguous)		Configuration or service dataset

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	22 OF 23

7 MAPPING INTERFACE

The point list description is available on demand in an Excel format type.

GENUNIT_STATUS gives information about the current status of the unit.

For Modbus protocol this information is converted in a numerical value in UNIT_STATUS register:

UNIT_STATUS	GENUNIT_STATUS
0	Off
1	Running
2	Stopping
3	Delay
4	Tripout
5	Ready
6	Override
7	Defrost
8	Run Test
9	Test
10	Local
11	Network
12	Remote
13	FreeCool

UNIT_ALM is the equivalent of ALARMRST_ALM (0:Normal, 1:Partial, 2:Shutdown).

UNIT_HEATCOOL is the equivalent of GENUNIT_HEATCOOL (0:Cooling, 1:Heating, 2:Standby, 3:Both).

ECG-UG-19-004	REVISION	DATE	PAGE
Modbus option	I	March 2024	23 OF 23

APPENDIX

List of subnet masks.

CIDR	Available bits	Subnet Mask	Number of hosts per subnet
/1	31	128.0.0.0	$2^{31}-2 = 2\,147\,483\,646$
/2	30	192.0.0.0	$2^{30}-2 = 1\,073\,741\,822$
/3	29	224.0.0.0	$2^{29}-2 = 536\,870\,910$
/4	28	240.0.0.0	$2^{28}-2 = 268\,435\,454$
/5	27	248.0.0.0	$2^{27}-2 = 134\,217\,726$
/6	26	252.0.0.0	$2^{26}-2 = 67\,108\,862$
/7	25	254.0.0.0	$2^{25}-2 = 33\,554\,430$
/8	24	255.0.0.0	$2^{24}-2 = 16\,777\,214$
/9	23	255.128.0.0	$2^{23}-2 = 8\,388\,606$
/10	22	255.192.0.0	$2^{22}-2 = 4\,194\,302$
/11	21	255.224.0.0	$2^{21}-2 = 2\,097\,150$
/12	20	255.240.0.0	$2^{20}-2 = 1\,048\,574$
/13	19	255.248.0.0	$2^{19}-2 = 524\,286$
/14	18	255.252.0.0	$2^{18}-2 = 262\,142$
/15	17	255.254.0.0	$2^{17}-2 = 131\,070$
/16	16	255.255.0.0	$2^{16}-2 = 65\,534$
/17	15	255.255.128.0	$2^{15}-2 = 32\,766$
/18	14	255.255.192.0	$2^{14}-2 = 16\,382$
/19	13	255.255.224.0	$2^{13}-2 = 8\,190$
/20	12	255.255.240.0	$2^{12}-2 = 4\,094$
/21	11	255.255.248.0	$2^{11}-2 = 2\,046$
/22	10	255.255.252.0	$2^{10}-2 = 1\,022$
/23	9	255.255.254.0	$2^9-2 = 510$
/24	8	255.255.255.0	$2^8-2 = 254$
/25	7	255.255.255.128	$2^7-2 = 126$
/26	6	255.255.255.192	$2^6-2 = 62$
/27	5	255.255.255.224	$2^5-2 = 30$
/28	4	255.255.255.240	$2^4-2 = 14$
/29	3	255.255.255.248	$2^3-2 = 6$
/30	2	255.255.255.252	$2^2-2 = 2$
/31	1	255.255.255.254	$2^1-0 = 2$
/32	0	255.255.255.255	$2^0-0 = 1$